


Interface - Signal Locations

1. Control signal to ignition coil
2. Signal from coolant temperature sensor
3. Not connected
4. Signal from throttle switch
5. Signal from lambda sensor
6. Ground to air flow meter
7. Ground
8. Not connected
9. Not connected
10. Not connected
11. Control signal to injection valves
12. Control signal to injection valves
13. Power supply from main relay
14. Signal from air temperature sensor
15. Signal from air flow meter
16. Not connected
17. Not connected
18. Not connected
19. Power supply to air flow meter
20. Control signal to fuel pump relay
21. Signal from ignition switch, terminal 50
22. Not connected
23. Control signal to injection valves
24. Control signal to injection valves
25. Ground

Wiring harness

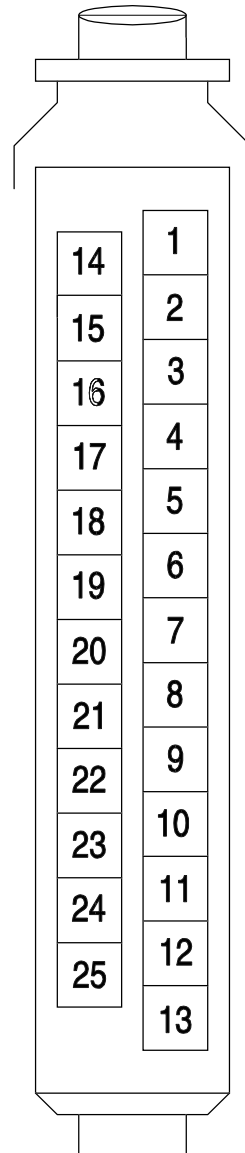

Note: Interface viewed from below.

Wiring Diagram

This wiring diagram is an example. Check in the relevant workshop manual for the diagram of the car you are working with.

