



Interface - Signal Locations

- | | |
|--|--|
| 1. Constant power supply from battery (KAM-power, Keep Alive Memory) | 32. Not connected. |
| 2. Not connected. | 33. Not connected. |
| 3. Speed signal (some models) | 34. Not connected. |
| 4. Speed signal (some models) | 35. CANP (Charcoal canister venting) |
| 5. Power from ignition switch (terminal 15, CFI only) | 36. Control signal from ignition amplifier |
| 6. Not connected. | 37. Power from ignition switch (terminal 15, also #57) |
| 7. Signal from coolant temperature sensor | 38. Not connected. |
| 8. Not connected. | 39. Not connected. |
| 9. Not connected. | 40. Ground |
| 10. AC / Ground | 41. Control signal to idle speed correction valve CFI |
| 11. Not connected. | 42. Not connected. |
| 12. Not connected. | 43. Signal from lambda sensor / air flow meter (some models) |
| 13. Not connected. | 44. Not connected. |
| 14. Not connected. | 45. Signal from MAP sensor (some models) |
| 15. Not connected. | 46. Ground to sensor |
| 16. Ground | 47. Signal from throttle potentiometer |
| 17. Diagnostic connector | 48. Diagnostic output |
| 18. Idle info CFI | 49. Ground to lambda sensor |
| 19. Not connected. | 50. Not connected. |
| 20. TZI shielded ground | 51. Control signal to vacuum valve |
| 21. Control signal to idle speed correction | 52. Not connected. |
| 22. Control signal to fuel pump relay | 53. Not connected. |
| 23. Octane adjustment | 54. Not connected. |
| 24. Not connected. | 55. Ground to crankshaft sensor |
| 25. Signal from air temperature sensor | 56. Signal from crankshaft sensor / PIP signal from ignition amplifier |
| 26. Power supply to sensor | 57. Signal from ignition switch (terminal 15, also #37) |
| 27. Signal from air flow meter (some models) | 58. Control signal to injection valves |
| 28. Not connected. | 59. Control signal to injection valves |
| 29. Signal from lambda sensor (some models) | 60. Ground |
| 30. Not connected. | |
| 31. CANP (Charcoal canister venting) | |

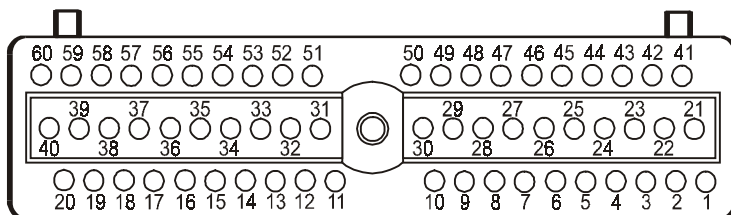

Wiring Diagram CFI

This wiring diagram is an example. Check in the relevant workshop manual for the diagram of the car you are working with.

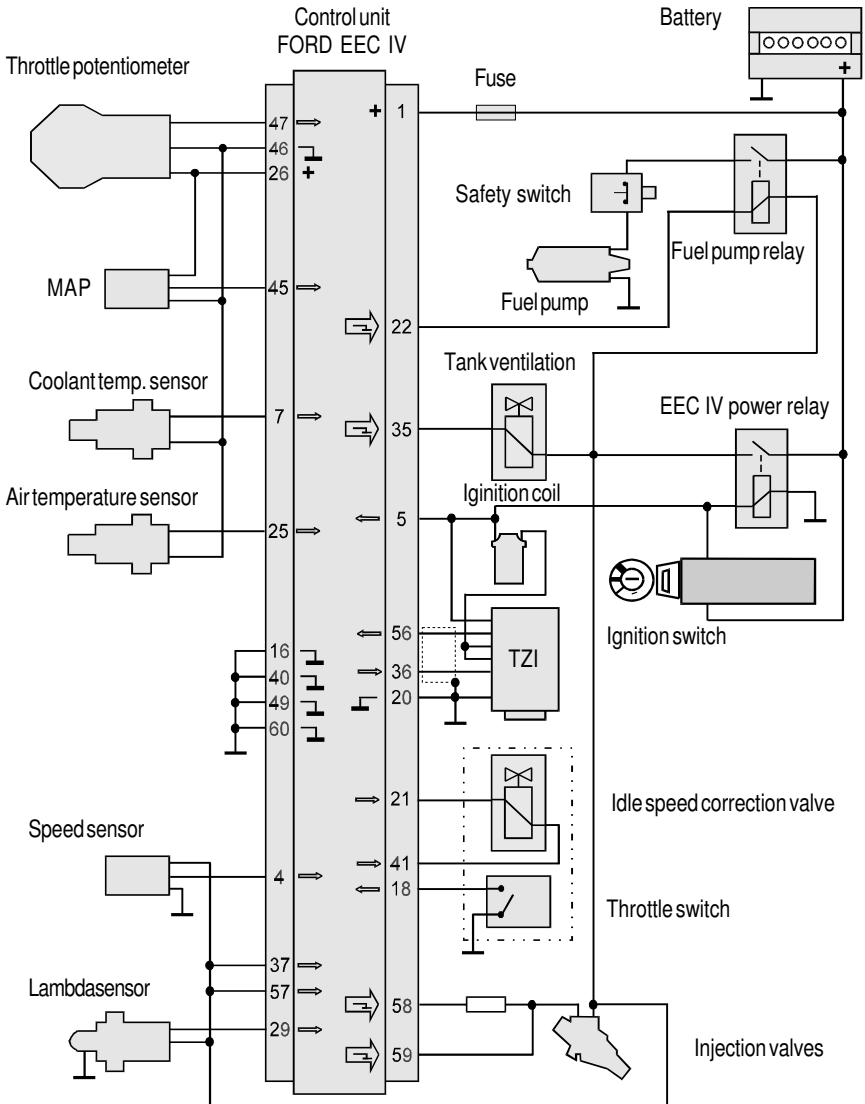

Wiring Diagram EFI

This wiring diagram is an example. Check in the relevant workshop manual for the diagram of the car you are working with.

