


Interface - Signal Locations

1. Engine speed signal
2. Signal from coolant temperature sensor
3. Signal from idle switch
4. Constant power supply from battery
5. Ground
6. Ground
7. Signal from throttle potentiometer
8. Power supply to throttle potentiometer
9. Power supply from main relay
10. Not connected
11. Ground
12. Control signal to tank ventilation valve
13. Control signal to injection valve
14. Signal from air temperature sensor
15. Not connected
16. Not connected
17. Control signal to fuel pump relay
18. Signal from throttle potentiometer
19. Not connected
20. Signal from lambdasensor
21. Not connected
22. Diagnose output
23. Control signal to idle speed correction
24. Control signal to idle speed correction
25. Ground

Note: Interface viewed from below.

Wiring harness

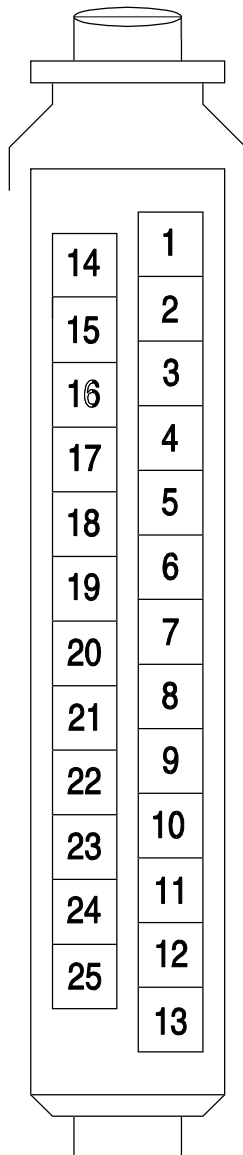

Wiring Diagram

Note:

This wiring diagram is an example. Check in the relevant workshop manual for the diagram of the car you are working with.

